















YUNO II

Universal multi-configuration integrated system

Robust, yet compact and stylish POS system

YUNO II is a new generation of the YUNO POS system; robust, stylish and compact, it suits the many applications of the POS vertical sectors.

A fanless, flexible and high-performance hardware, it offers a choice between 3 different INTEL 11th generation processors (Tiger Lake & Elkhart Lake); the system is available in 2 formats (traditional 4:3 15.1" screen and Wide 16:9 15.6" screen with Full HD) and equipped with a shock- and scratch-proof, multi-touch, projected, capacitive screen (10 point PCAP technology).

Very flexible, YUNO II is available with VESA fixings options (for wall or pole mounted solutions).

The standard version features a 128GB flash disk (NVMe-M.2) and stands up to dirt in the toughest settings (fat, crumbs, dust, splashes and leftovers in kitchens, restaurants and bakeries). It integrates energy efficient processors (J6412, or i3-1115G4E, or i5-1145G7E) and a heat-dissipating aluminium

structure, ensuring compliance with environmental standards (low carbon footprint).

YUNO II is an accessible product whose many features (technology, ergonomics, flexibility and design) make it good value for money. It constitutes a sensible, cost effective and long-term POS IT investment.











YUNO II



11th generation of INTEL processors (J6412, i3-1115G4E, i5-1145G7E) (Energy efficient processors for low carbon footprint)

NVMe - M.2 - 128 GB (up to 512 GB)

Projected, capacitive, multi-touch screen (10 point - PCAP)

4:3 or 16:9 formats (15.1" or 15.6") RAM 4 or 8 GB (standard) - up to 32 GB

Tilting base: 0-90°

Discreet yet easily accessible connectivity

2nd screen output

Available with VESA bracket option(s), for wall and pole mounted installations

Thiner base for a light design

Detachable magnetic rear cover (easy and quick to remove/replace)

Resistant and accessible on/off button

Transparent status LED lighted AURES logo on the left side of the base (green / red)

MISCELLANEOUS

Easy maintenance (the most compact motherboard in the market)

2 LAN port (1 LAN port on model with J6412 processor)












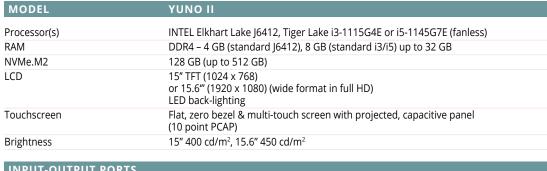

INFOI-OUTFOI FORIS	
Serial	2 x serial ports (5/12 v power supply for COM3 / COM4 available)
USB	6 x USB 3.0 2 x USB-C (1 to CPU)
LAN	2 x 10/100/1000Base-T (1 x LAN for J6412 model)
External display	Port with support for HDMI, DVI and VGA (via USB-C)
Cash Drawer	2 x 24/12 V DC
Audio	Internal loudspeaker
Power Supply	+ external 19v. DC
TPM2.0	on all boards



EMI	CE/FCC Class B, UL, RCM, UKCA
VPRO	on I5 version
Operating Temperature	0-35 °C
Front	Dust- and splash-proof
Colour	Black (grey base)
Materials	Polycarbonate (cover) + aluminium (structure)
MTBF (screen)	50,000 hours
Dimensions (W x D x H)	342.9 x 167.5 x 303.8 mm (15.1" format, with vertical screen) 382 x 170.5 x 276.1 mm (15.6" Wide format, screen vertical)
Weight	5.5 - 6.5 kg depending on the option (15.1" format) 6.5 - 7.5 kg (15.6" Wide format)
Compatible OS	Windows 10 IoT Enterprise, Windows 11, Linux, Android X86



OPTIONAL EXTRAS	
Multi-Technology Card Reader	for combined reading of MSR and RFID (high and low frequences), Bluetooth (BLE), NFC
Addimat and/or Dallas readers	1 slot, at right of EPOS terminal
Bare-code scanners	1D & 2D
Fingerprint reader	Yes
Customer display	20 characters x 2 lines LCM
2 nd screen (touch or non touch)	10.1" - 16:9 1280 x 800 Flat LED screen
WIFI	via BT/Wi-Fi USB key (same as for JAZZ/TWIST systems)
VESA fixings option(s)	Optional brackets

